



DMOC MOTOR DRIVER W/O CAN

- ① NORMALLY OPEN. GROUNDED WHEN CHARGED
(Prevents regen and charging when battery is full.)
 - ② NORMALLY OPEN. GROUNDED WHEN DISCHARGED
(Stops car when battery is empty.)
 - ③ NORM. 5 V. GRADUALLY DOWN TO 0 WHEN DISCHARGED
(Reduces power at end of discharge.)
 - ④ 12 V WHEN ON
 - ⑥ A LOAD CURRENT SENSOR IS REQUIRED
- A USE EITHER D1, R4 & R5, OR R2 & R3 (NOT BOTH)

A	12/14/09	UPDATED	D'de
Rev	Date	Rev description	By
Drawing #	Title		Size B
-	AZURE DMOC w/o CAN		Sh 1 of 1
elithion			Box 4825 303-413-1500 Boulder CO 80306 elithion.com